



Instructions:

- 1) Unscrew and remove the red wire from the Laser PSU.
- 2) Connect the removed wire to "Vin" of the PWM connector, extending if required.
- 3) Add a new wire between the now empty Laser PSU pin and "Vout" of the PWM connector.
- 4) Add a ground wire between "G" of the Laser PSU and "Gnd" of the PWM connector.