


Supported Configuration

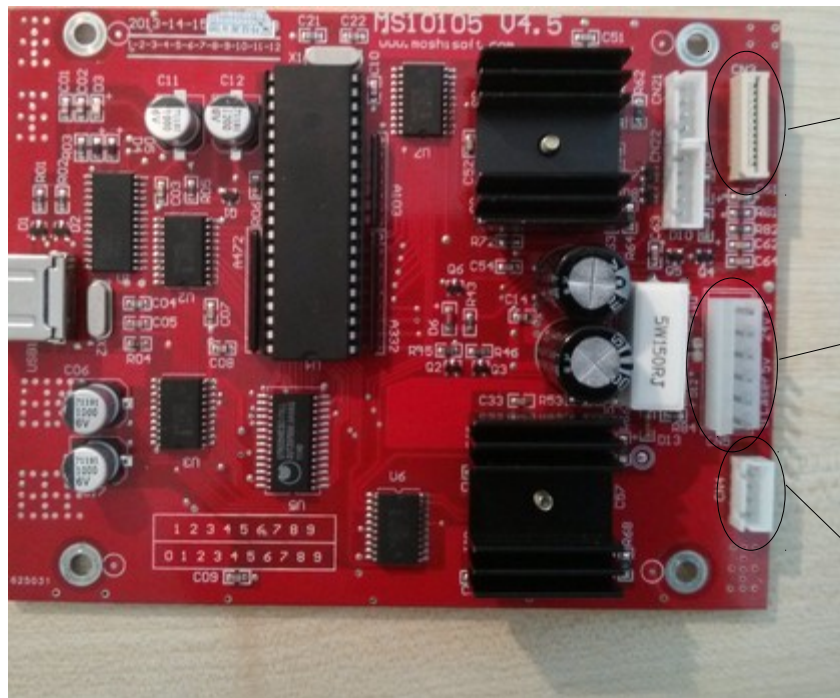

X Stepper
(Left to Right)
& Endstops

Power and
Laser Trigger

Y Stepper
(Front to Back)



Laser Power
(From POT)
& Trigger

If your machine doesn't closely match the above,
please contact me to discuss options.