



## Supported Configuration

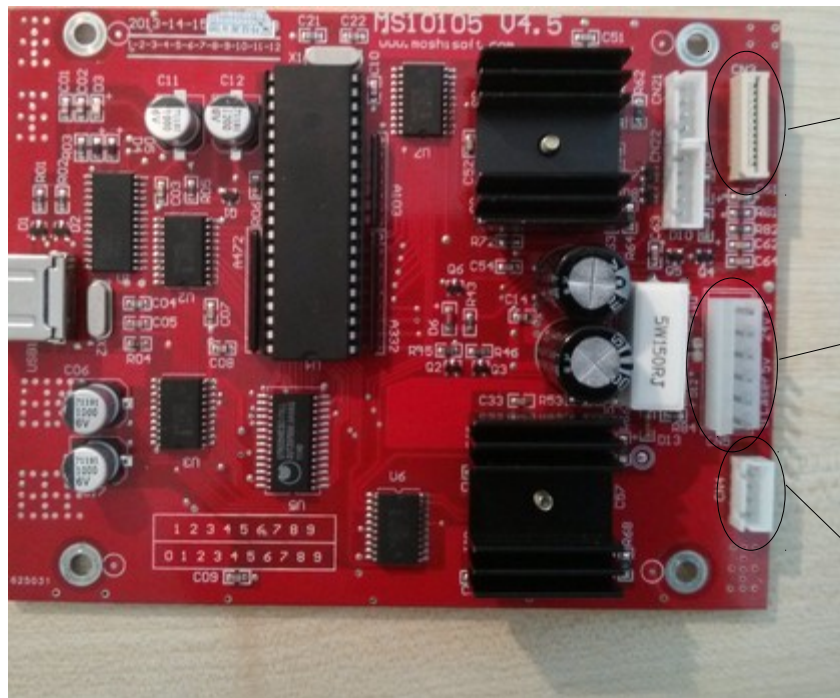

X Stepper  
(Left to Right)  
& Endstops

Power and  
Laser Trigger

Y Stepper  
(Front to Back)

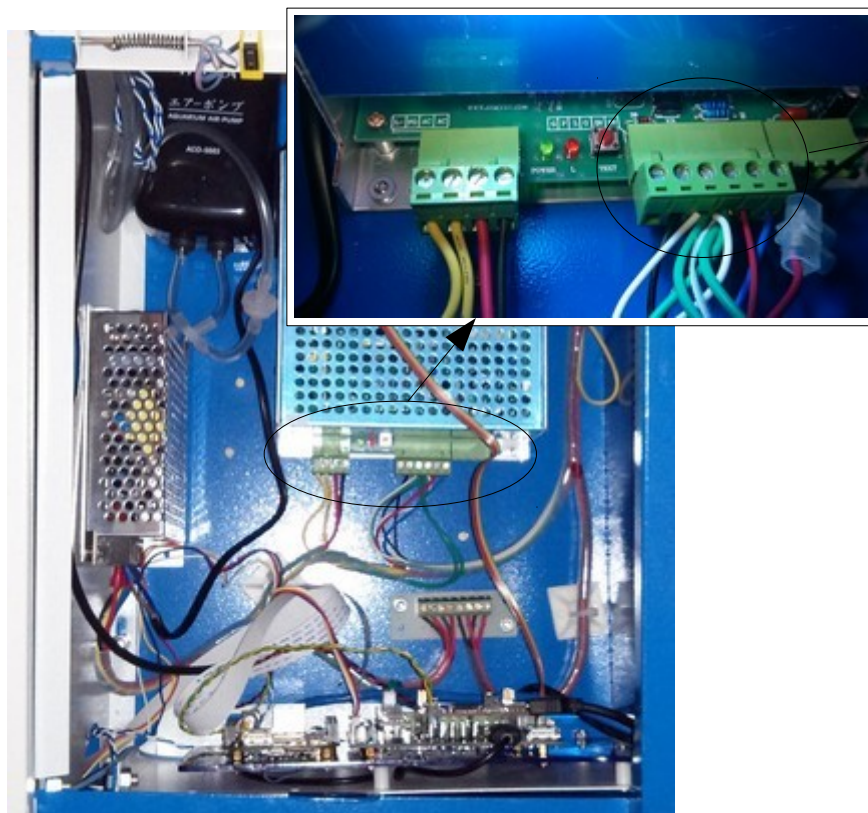

Laser Power  
(From POT)  
& Trigger

If your machine doesn't closely match the above,  
please contact me to discuss options.